

**CITY of Mount Holly Fire Marshal's Office**

	Building System Outputs															Central Comm					
	ACTIVATE COMMON ALARM SIGNAL INDICATOR	ACTIVATE AUDIBLE ALARM SIGNAL	ACTIVATE COMMON SUPERVISORY SIGNAL INDICATOR	ACTIVATE AUDIBLE SUPERVISORY INDICATOR	ACTIVATE COMMON TROUBLE SIGNAL INDICATOR	ACTIVATE AUDIBLE TROUBLE SIGNAL	ACTIVATE GENERAL EVACUATION SIGNAL	DISPLAY CHANGE OF STATUS	ACTIVATE EXTERNAL HORNS / STROBES	TRANSMIT FIRE ALARM SIGNAL TO CENTRAL STATION	TRANSMIT SUPERVISORY SIGNAL TO CENTRAL STATION	TRANSMIT TROUBLE SIGNAL TO CENTRAL STATION	RETURN ELEVATOR TO ALTERNATE FLOOR	RETURN ELEVATOR TO FIRST FLOOR	SHUNT TRIP AFTER ELEVATOR REACHES DESIGNATED FLOOR	SHUT DOWN REPECTIVE HVAC	SHOW CHANGE OF STATUS ON ANNUNCIATOR	SHOW CHANGE OF STATUS ON CENTRAL PANEL	TRANSMIT FIRE ALARM SIGNAL TO CENTRAL STATION	TRANSMIT SUPERVISORY SIGNAL TO CENTRAL STATION	TRANSMIT TROUBLE SIGNAL TO CENTRAL STATION
MANUAL FIRE ALARM PULL BOXES	X	X					X	X	X	X							X	X	X		
BUILDING SMOKE DETECTOR	X	X					X	X	X	X							X	X	X		
DUCT SMOKE DETECTOR			X	X				X			X					X	X	X		X	
SPRINKLER WATER FLOW	X	X					X	X	X	X							X	X	X		
SPRINKLER TAMPER			X	X				X			X						X	X		X	
ELEV. EQ. ROOM SMOKE DETECTOR	X	X					X	X	X	X				X			X	X	X		
ELEV. EQ. ROOM HEAT DETECTOR	X	X					X	X	X	X				X	X		X	X	X		
ELEV. SHAFT HEAT DETECOR	X	X					X	X	X	X					X		X	X	X		
1ST FLOOR ELEV. LOBBY SMOKE DET	X	X					X	X	X	X			X				X	X	X		
UPPER FLR ELEV. LOBBY SMOKE DET	X	X					X	X	X	X				X			X	X	X		
HOOD SUPPRESSION SYSTEM	X	X					X	X	X	X							X	X	X		
NOTIFICATION DEVICE SHORT CIRCUIT					X	X		X				X					X	X			X
OPEN CIRCUIT					X	X		X				X					X	X			X
GROUND FAULT					X	X		X				X					X	X			X
FIRE ALARM A.C. POWER FAILURE					X	X		X				X					X	X			X
FIRE ALARM SYSTEM LOW BATTERY					X			X				X					X	X			X